
MICRO **NEW CLASSIC**

MICRO **BULLET**

MICRO **JUNIOR**

MICRO **SPRITE**

MICRO **FLEX**



m-cro®

Scooter

Owner's Manual
Gebrauchsanleitung
Manuel d'utilisation
Manuale d'uso
Manual del propietario

Owner's Manual

This manual contains important safety, performance and maintenance information. Read it carefully before taking your first ride on your MICRO SCOOTER and keep it handy for future reference.

the  ***Original scooter***

Safety rules

We don't want you to get hurt – please follow these safety rules.

- > Always check over your MICRO SCOOTER prior to riding, and make certain that all clamps, folding handles, bolts and screws are tightened properly, also check the wheels for wear and tightness and make sure that the steering column is securely held in the proper position.
- > Always wear a helmet, wrist-pads, elbow-pads, knee-pads and shoes with rubber soles when riding the MICRO SCOOTER.
- > Avoid riding downhill, as the integrated brake does not offer reliable protection on slopes. The brake is not designed for downhill rides!
- > The folding mechanism **should only be operated by an adult.**
- > The brake fender does get hot – do not touch after braking. Avoid braking for long stretches.
- > Do not exceed the maximum speed of 10 km/h (6,2 MPH).
- > Avoid roads, paths or other areas used by cars.
- > Always follow the traffic rules and guidelines in your area.
- > Never ride with more than one person on a MICRO SCOOTER.
- > Never ride a MICRO SCOOTER at dusk or night.
- > Do not use your MICRO SCOOTER on wet, oily, sandy, dirt, icy, rough or uneven surfaces.
- > Do not stunt ride – know your abilities and limits and always ride with control.
- > Do not apply any alterations to your MICRO SCOOTER which would affect your safety.
- > Carrying capacity 100 kg (220 lbs).
- > Frequent change of wheels can cause the loctite to become ineffective and must be reapplied.

Warnings

Like bicycling, skateboarding and in-line skating, riding a MICRO SCOOTER can be dangerous even under the best of circumstances. Serious injury or even death is possible. Always wear an approved helmet when riding your MICRO SCOOTER. Keep the chinstrap securely buckled. Failure to wear an approved helmet may result in serious injury or death. Wet weather impairs traction, braking and visibility. The risk of accidents and injury is dramatically increased in wet conditions. Riding at dusk, after dark, or at times of poor visibility is dangerous and can result in serious injury or death. Please keep your fingers out of the folding mechanism while folding or unfolding your MICRO SCOOTER. Children should only use the MICRO SCOOTER only under adult supervision. The folding mechanism should only be used by an adult.


Assembly instruction



MICRO **NEW CLASSIC**

Folding an unfolding the steering column

Open clamp (A) to release tension. Move folding handle (B) and unfold the Scooter until clamp (A) locks safely into position.

After that tighten clamp (A) and ensure that there is sufficient tension.

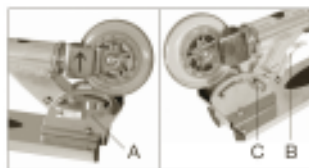

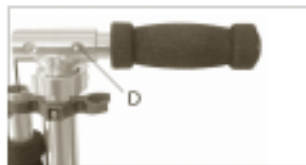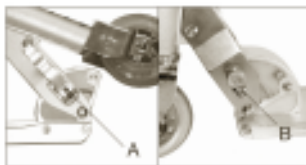

MICRO *BULLET* / *SPRITE* / *FLEX*

Folding an unfolding the steering column

Open clamp to release tension (A). Push down locking button (B), fold up steering column and press it until it locks into position.

Securing

To secure the column tighten the knurled screw. Then fold up clamp (A) until there is sufficient tension and the clamp is firmly in position.

To Replace Handles

Insert handles into the openings, align brass buttons (D), making sure both buttons snap into holes securely.

To Remove Handles

Press brass buttons in and pull handles outward.

To Raise/Lower Steering Tube Height

Open clamp (E), adjust steering tube to desired height, then firmly close clamp, making sure that it applies clamping force to the steering tube.


If clamp is loose

Open clamp (E), twist knurled bolt (F) on other side clockwise a few turns, then close clamp (E) again. Repeat if necessary until clamp force is adequate.

Brake System

Your MICRO SCOOTER has a unique and innovative brake system. To activate brake, apply firm pressure on rear fender with right or left foot.

Attention! Brake fender does get very hot – do not get burned!

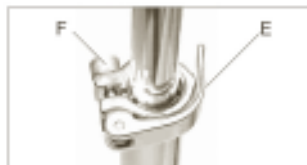

Limited warranty

A 24-months warranty covering defects in material and workmanship is provided for the MICRO SCOOTER starting from the date of purchase. During the warranty period it shall be at the discretion of Micro Mobility Systems Ltd. to decide whether to repair or replace any products found to be subject to defects in material or workmanship.

This warranty shall not include damage caused by:

- > improper usage (e.g. jumps), usage for purposes other than those intended, negligent handling or normal wear and tear
- > external influences (e.g. impact against edges of curbs, rails, obstacles on road, etc.).
- > improper attempts at repair or modifications.
- > incorrect fitting of wheels, ball bearings, springs, boards and other hardware items.

Warranty Service

- > Make sure you keep your till receipt in a safe place – it is your proof of purchase. A copy of the receipt has to be submitted with warranty claims. To do so, take the product and your receipt back to your MICRO SCOOTER dealer.
- > Your MICRO SCOOTER dealer will inspect the product and

then make a suggestion as regards to further action.

- > Provided that the warranty period is not expired and that your MICRO SCOOTER dealer has decided that the problem has been caused by a defect in material or workmanship, your MICRO SCOOTER will be either repaired or replaced with an identical or equivalent model.

Important

- > This warranty only applies to initial purchasers and is limited to 24 months from the date of purchase from the retailer. Make sure you keep your till receipt as it is your proof of purchase.
- > Responsibility for MICRO SCOOTER activities: Always keep in control and wear protective equipment at all times. The liability for guaranteed characteristics and liability in accordance with the Product Liability Act shall remain thereby unaffected.
- > This warranty gives you special legal rights. You may also enjoy other rights depending on the country or state you live in. Keep this warranty safe.

Maintenance

Clean the scooter with a soft, moist cloth after each use. You should also clean the bearings regularly using a soft, moist cloth and grease them periodically, exchange if necessary. Remove any burrs and ridges that can occur through usage to prevent cuts.

Do not lean too heavily on the handlebars since this could cause the tube to bend slightly, thus preventing proper operation of the scooter.

Till receipt

We recommend you to store your till receipt in this provided space – you may need to use it to repair or replace any products found to be defective in material or workmanship.

Dealer address



www.micro-mobility.com

Micro Mobility Systems AG, Bahnhofstrasse 10, CH-8700 Küsnacht Fon +41 (0) 1910 11 22 Fax +41 (0) 1910 66 29

